
RIM V980 VICTORIA RIM DOOR KNOB

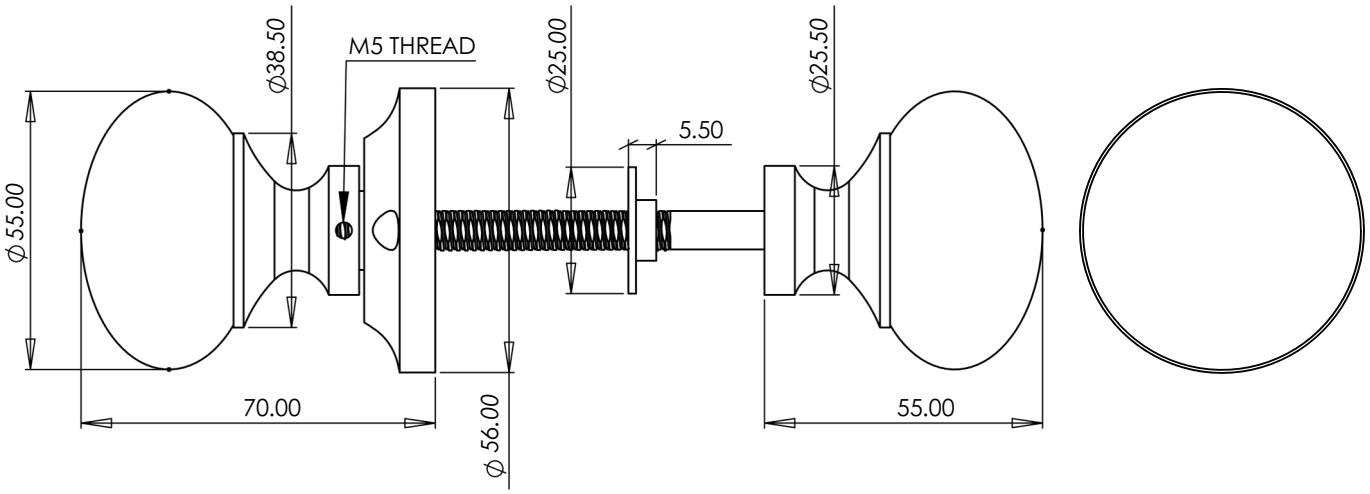

2


1



2 Dimensions:
see the outlines given above




Spindle : 7.8mm x 85mm - 1pc.



Spindle : 7.8mm x 90mm - 1pc.

3

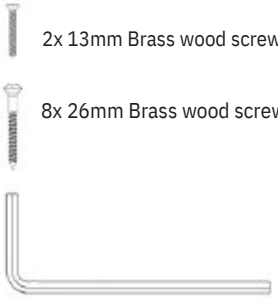

2x 13mm Brass wood screws

8x 26mm Brass wood screws

FINISHES

- MB Matt Bronze finish
- SB Satin Brass finish
- PN Polished Nickel finish
- SN Satin Nickel finish
- AT Antique Brass finish
- SC Satin Chrome finish
- PB Polished Brass finish
- PC Polished Chrome finish
- BK Matt Black finish

Overview	1 Victoria Rim Door Knob illustrated	2 General Dimensions of Victoria Rim Door Knob	3 Supplied with: 2x spindle 2x 13mm & 8x 26mm screws 2.5mm Allen Key


M Marcus Ltd. , Dudley


Product Code	Material	
RIM V980	Solid Brass	Sizes shown are in mm and approximate. We reserve the right to amend where necessary and without any prior notice.

Property of M Marcus Ltd. ©

Heritage Brass

SOLID BRASS DOOR FURNITURE

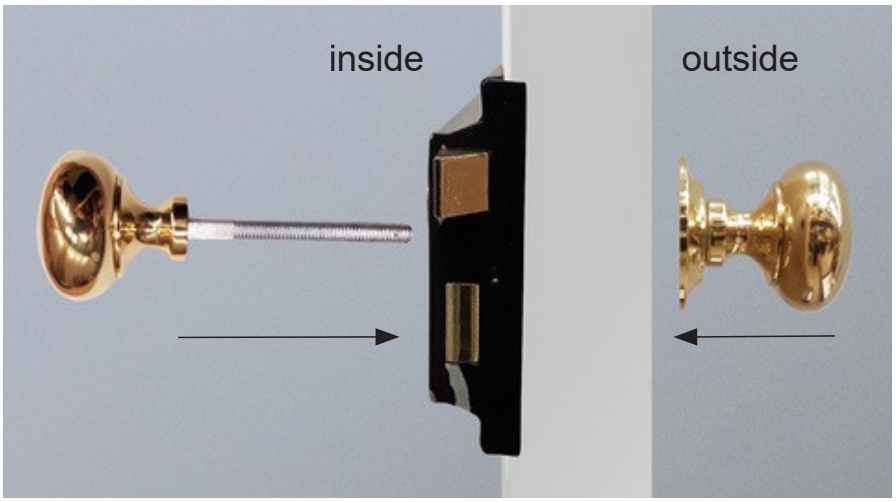

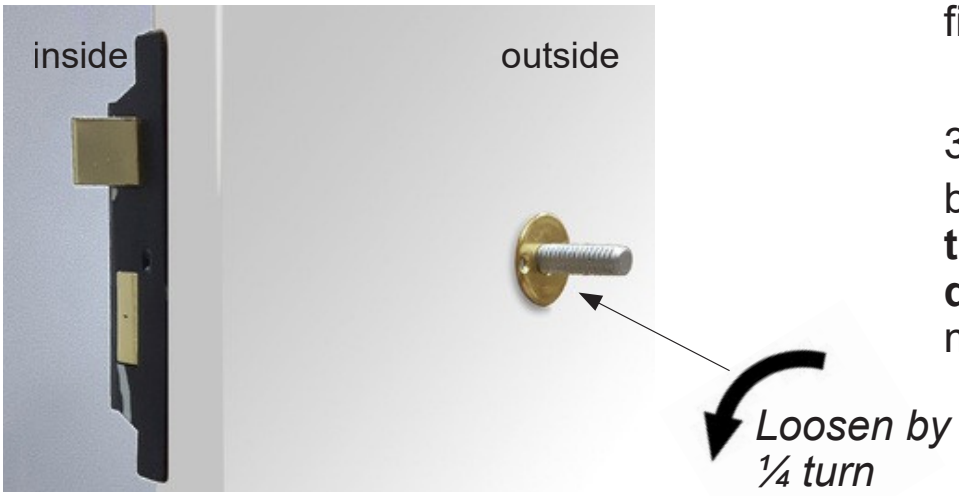

Assembly Instructions:

1.Insert thethreaded spindle, attached to the knob, through the lock body.

2.Thread the **round brass retaining nut** onto the spindle by hand until it is finger-tight.

3.Once secured, rotate the brass retaining nut **90° in the reverse (loosening) direction** to allow free movement of the knob.