



Responder 24

Pull Side fitting




Push Side - Hold Open
Installation video




Push Side - Swing Free
Installation video

www.rutlanduk.co.uk

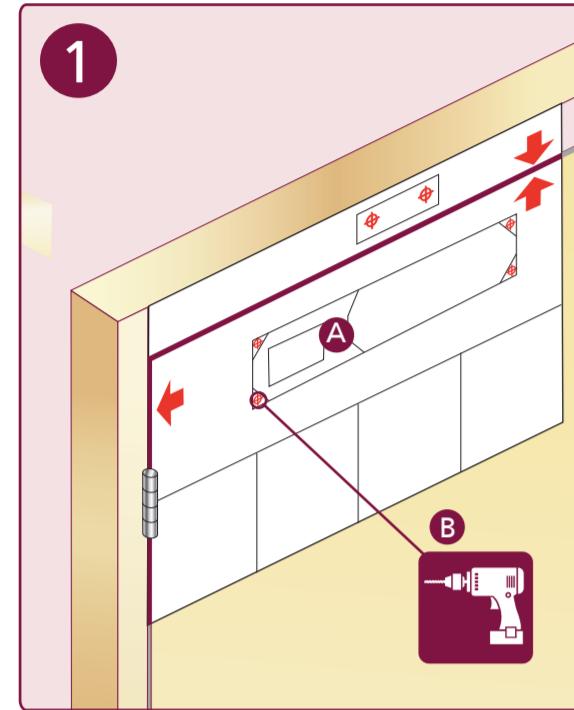


- A. Choose the correct template.
B. Position on door and pilot drill fixing positions.

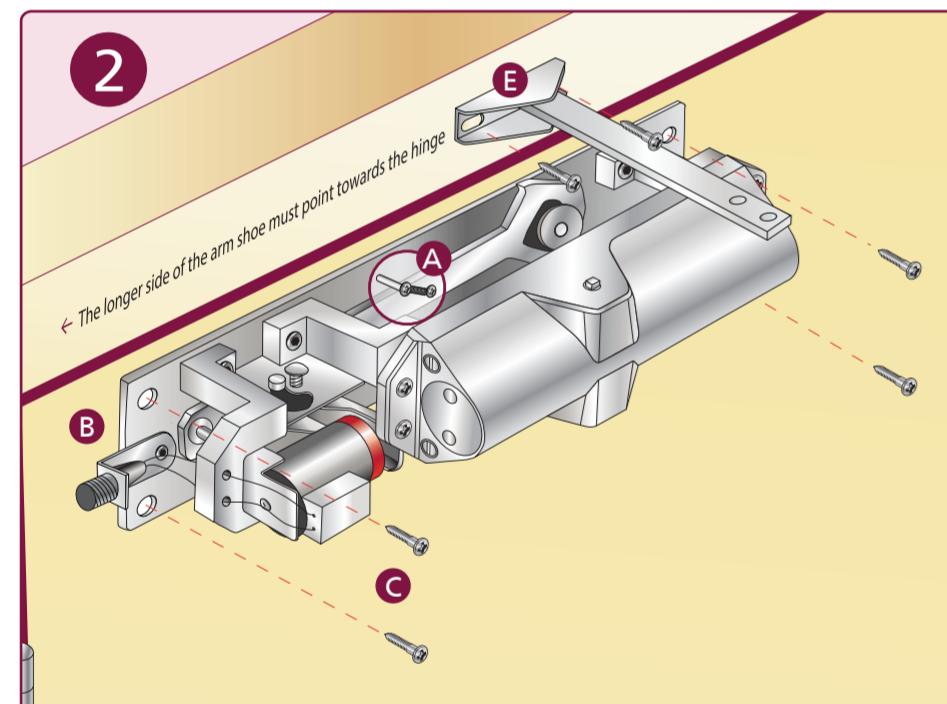


- A. Position spring to lift the Catch Plate to the top location pin.
B. Remove locking screw on electrical connection bracket to each end of the unit. Keep for later.
C. Fix closer to door with the Electromagnet nearest to the hinge.
D. Refit the locking screw on both electrical connections.
E. Separate the arm assembly and connect to the frame with the long end of the arm shoe towards the hinge.

CHOOSE EITHER "HOLD OPEN" OR "SWING FREE".

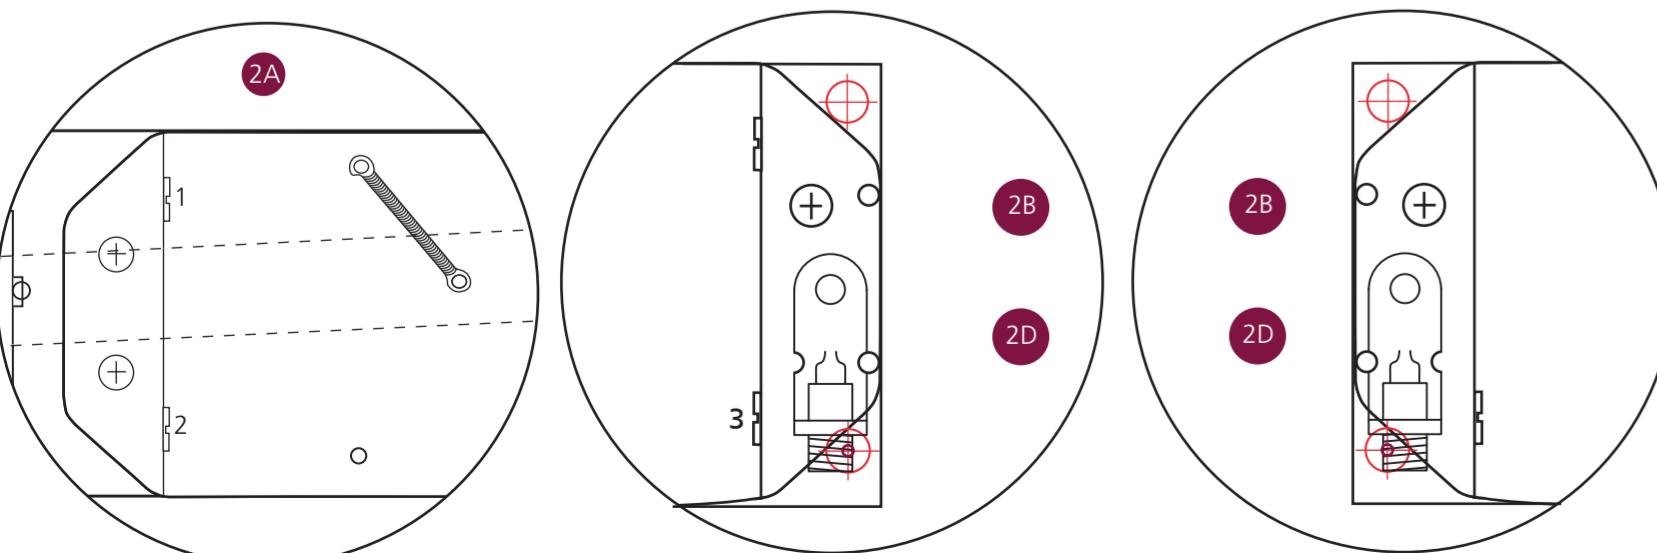

THE PINION BOLT MUST BE TIGHTENED TO 12NM


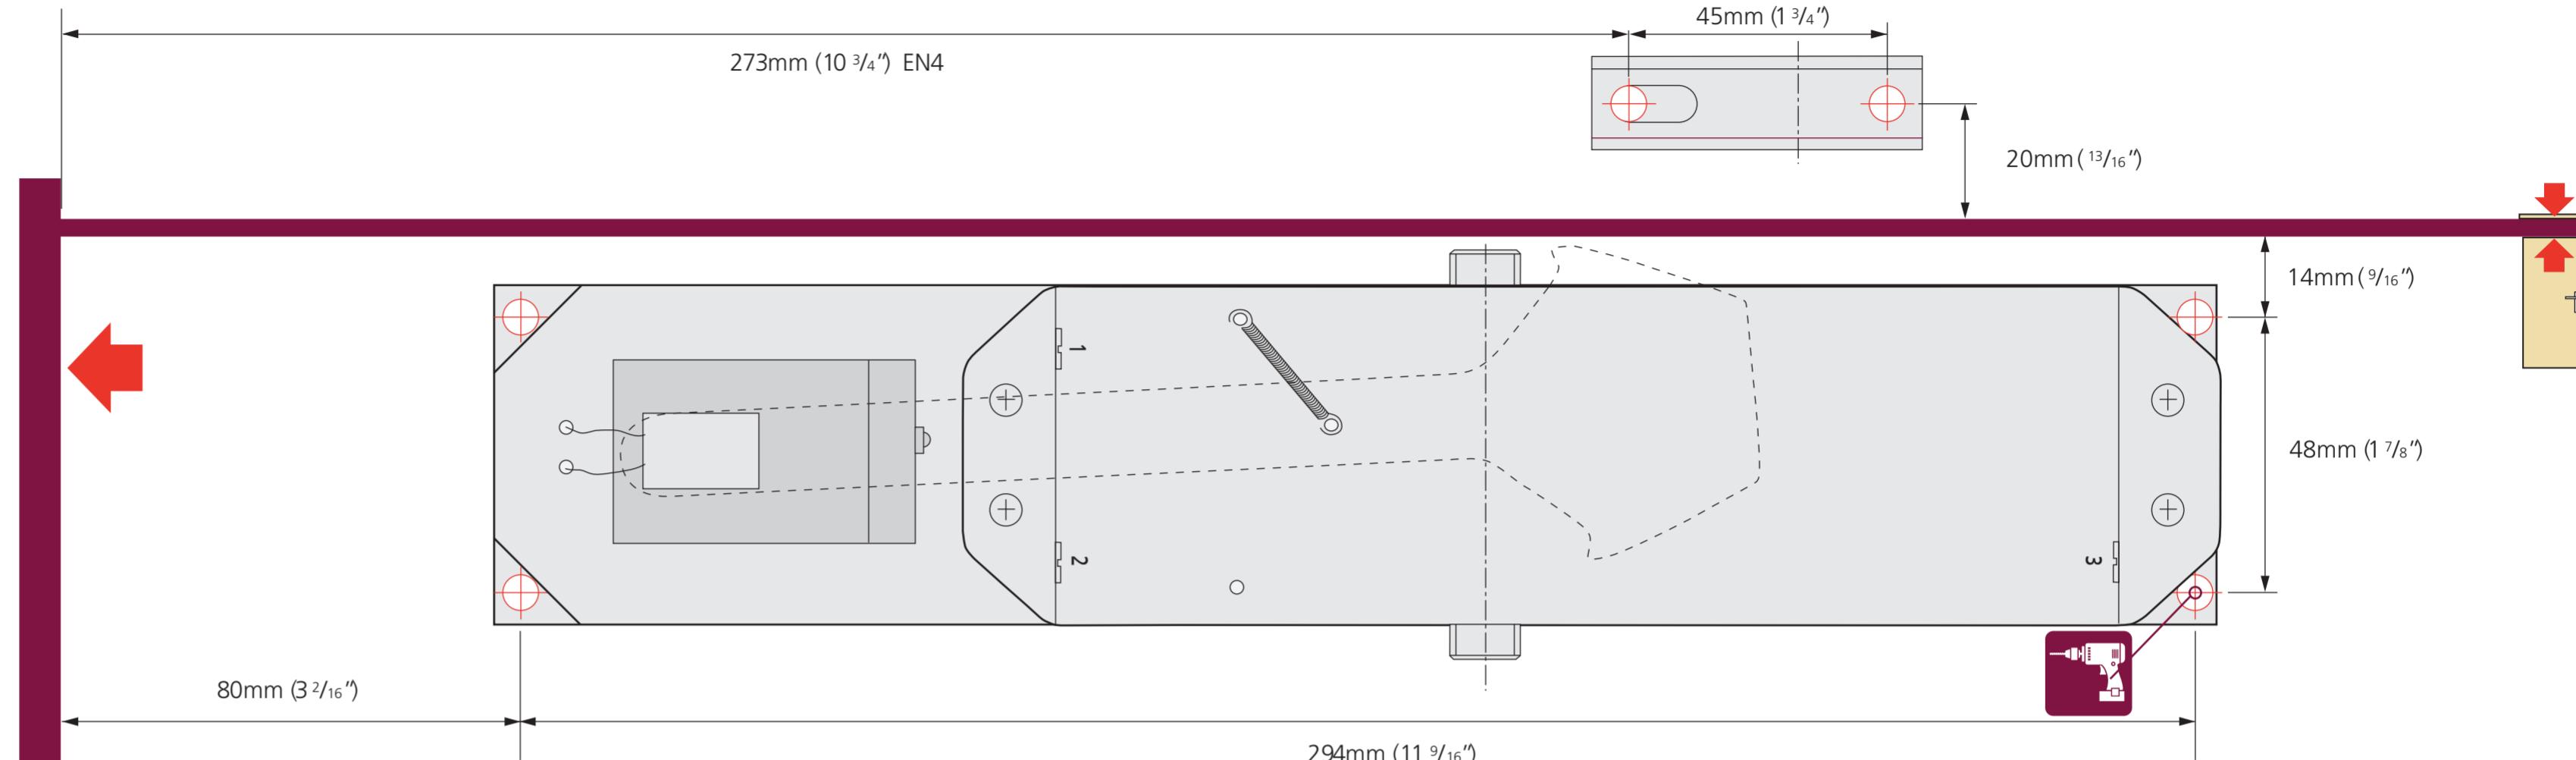


3

NB: Choose either
3A HOLD OPEN FIXING OR
3B SWING FREE FIXING


3A. HOLD OPEN

- A. Insert the 2 metal bearing collars into the nylon bearing collars.
B. Push the bearing collar into both arm holes insisting that the secondary part of the arm is on the top.
C. Insert the bolt up through the Arc Wheel and through the second hole in the forearm and lock with the captive nut.

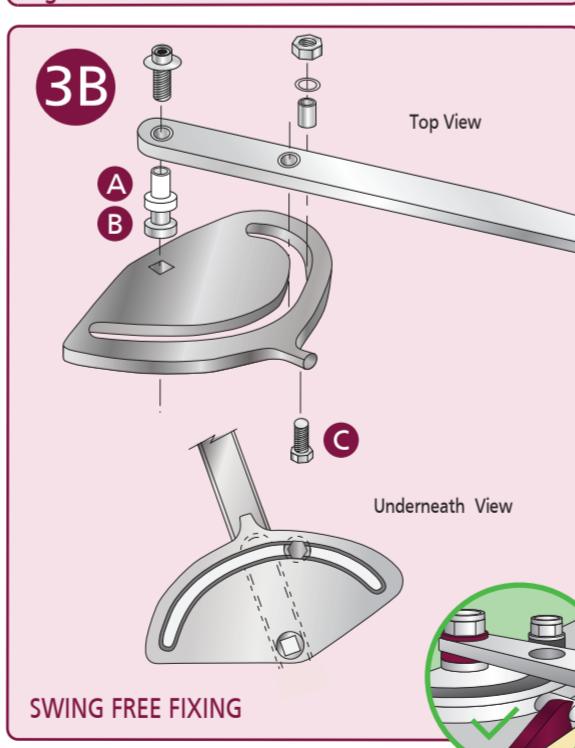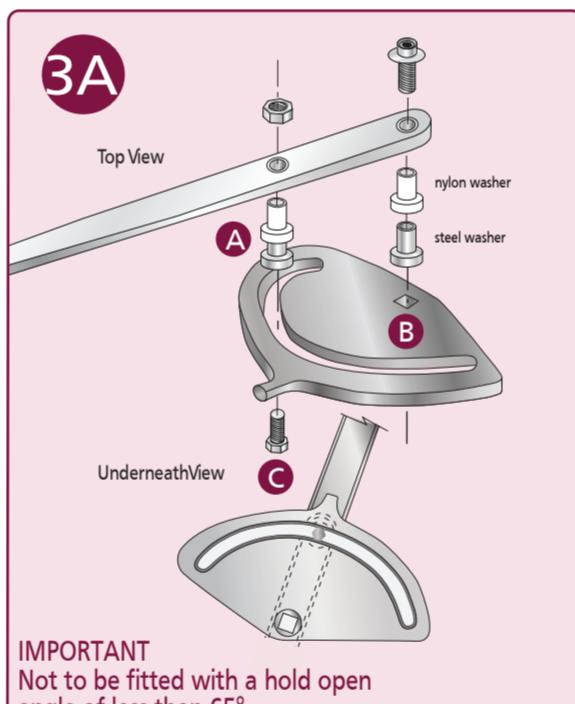

3B. SWING FREE

- A. Insert a metal bearing collar into the nylon bearing collar.
B. Push the bearing collar into the first forearm hole insisting that the secondary part of the arm is on the top.
C. Insert machine bolt up through the bottom of the Arc Wheel through the spacing collar and lock with washer and bolt next to the arm (NOT THROUGH THE ARM).

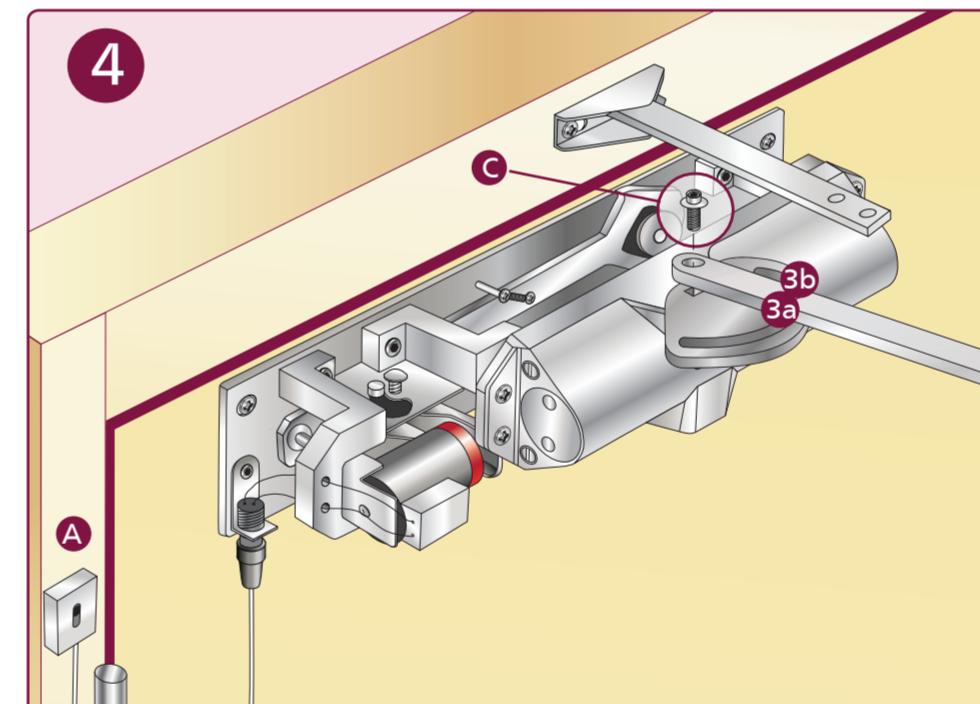

- A. Wire the electrical connections to the 24V supply on the door frame.
B. Plug in the lead and fasten. Switch on the electrical supply.
C. Position the Arm Assembly onto the Door Closer Body at approx. 90 degrees and fasten with the Long Shoulder bolt.

EN 4 Power Size

EN Size	Max door width	
4*	1100mm	130°


*FACTORY PRE-SET

IMPORTANT NOTES:
ALL PARTS THAT ARE VISIBLE WHEN THE COVER IS ON SHOULD BE CHECKED AND TIGHTENED EVERY 3 MONTHS IF REQUIRED.
ANY WORN OR DAMAGED PART MUST BE NOTIFIED TO THE SUPPLIER UPON OBSERVATION.
KEEPING A WRITTEN LOG OF THE INSPECTIONS IS ADVISED FOR YOUR GUARANTEE.
THE PINION BOLT MUST BE TIGHTENED TO 12Nm.
VOLTAGE INPUT: 24V DC
POWER CONSUMPTION: 2.1 Wh

A MECHANICAL DOOR CLOSER IS NOT DESIGNED TO OVERCOME POOR FITTING. EXCESSIVE AIR PRESSURES OR BINDING SMOKE AND WEATHER SEALS. EXCESSIVE AIR PRESSURES CAN BE CREATED BY THROUGH DRAFT, BY AIR CONDITIONING, BY SMALL ROOMS WITHOUT VENTILATION, OR WHERE NO AIR TRANSFERS GRILLS ARE FITTED. MECHANICAL DOOR CLOSERS ARE DESIGNED TO CLOSE THE STATED AND TESTED SPECIFICATION OF DOOR WEIGHT AND DOORSETS/DOOR ASSEMBLIES WHEN DOORS ARE FITTED WITH CORRECT GAPS AND NOT BINDING OR DOUBLE SHOT A DOOR CLOSER" VIDEO ONLINE. WHERE DOORS ARE NOT CLOSING DUE TO AIR PRESSURES THEN PROFESSIONAL ADVICE FROM AN AUTHORISED INSTALLER IS RECOMMENDED TO FIT TESTED AND THIRD PARTY CERTIFIED AIR TRANSFER GRILLS AND/OR AUTOMATIC DOOR OPERATORS.
NOTE: BC VALVES ARE DESIGNED TO ASSIST BACK-CHECK AND DO NOT REPLACE THE REQUIREMENT FOR CORRECTLY FITTED DOORSTOP OR SAFETY BARRIERS.

TECHNICAL INFORMATION:
BS EN1634-1:2014+A1:2018

FURTHER WARRANTY INFORMATION: [https://www.rutlanduk.co.uk/rutland-warranty](http://www.rutlanduk.co.uk/rutland-warranty)

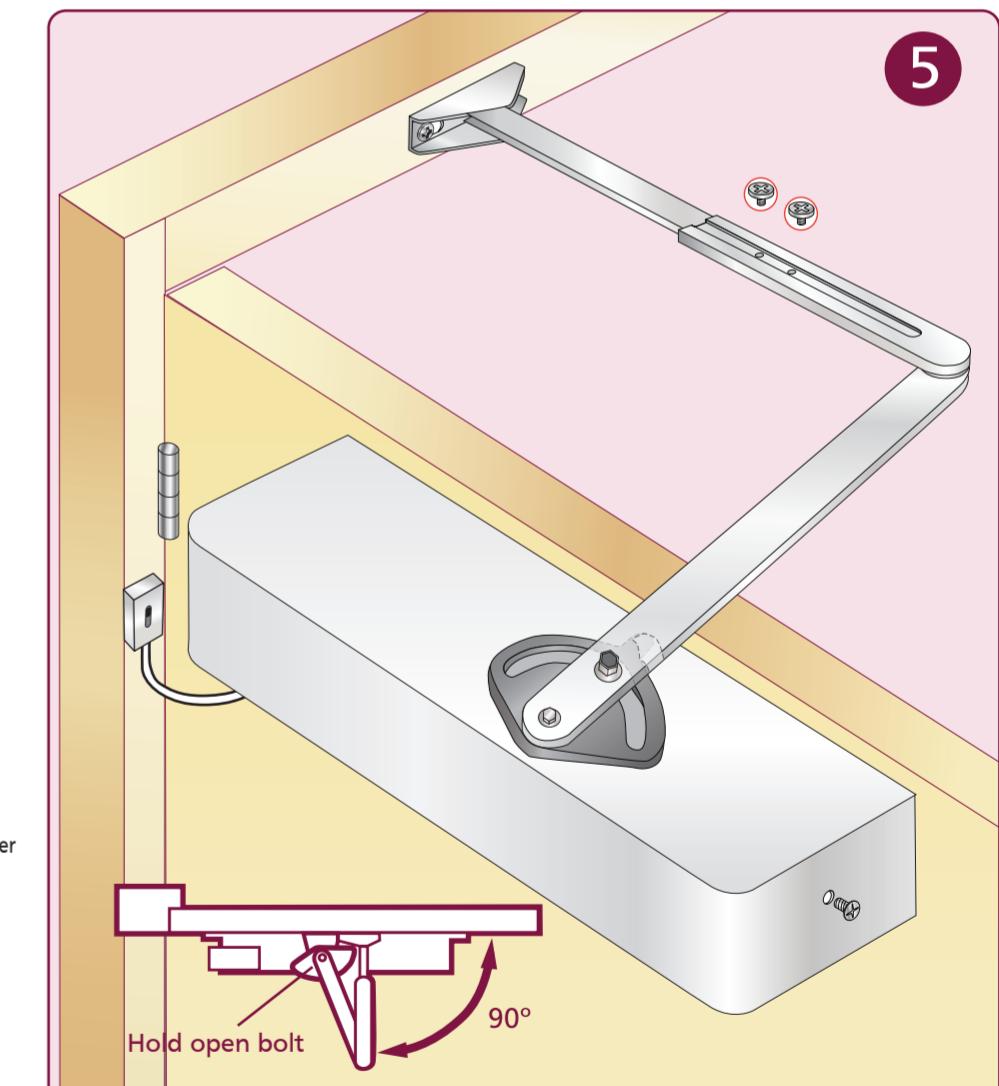

- A. Open door and rotate the arm through 180° to engage the hold open Catch Plate.
B. Fasten secondary arm together and secure with locking screw. Switch off electricity and allow door to close.
C. Adjust secondary arm so it holds at 90° to the frame and tighten the two locking screws.

6. SET UP AND ADJUST

- A. Adjust Closing Speed valve "1". This works from fully open to 15°. Turn clockwise to slow down the closing speed.
B. Adjust Latching Speed valve "2". This works from 15° to closed. Turn clockwise to slow down the latching speed.
C. Switch on electricity and re-open the door to hold on the Catch Plate.

7. FINISHING

- A. To adjust the hold open or swing free angle on the Arc Wheel, first loosen the second nut and turn the door as required and retighten.



Responder 24

Pull Side fitting




Push Side - Hold Open
Installation video





Push Side - Swing Free
Installation video

www.rutlanduk.co.uk

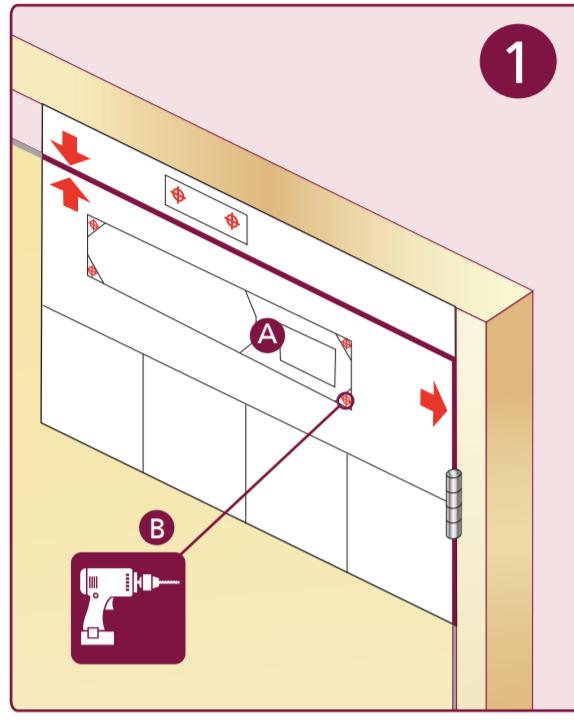


- A. Choose the correct template.
B. Position on door and pilot drill fixing positions.

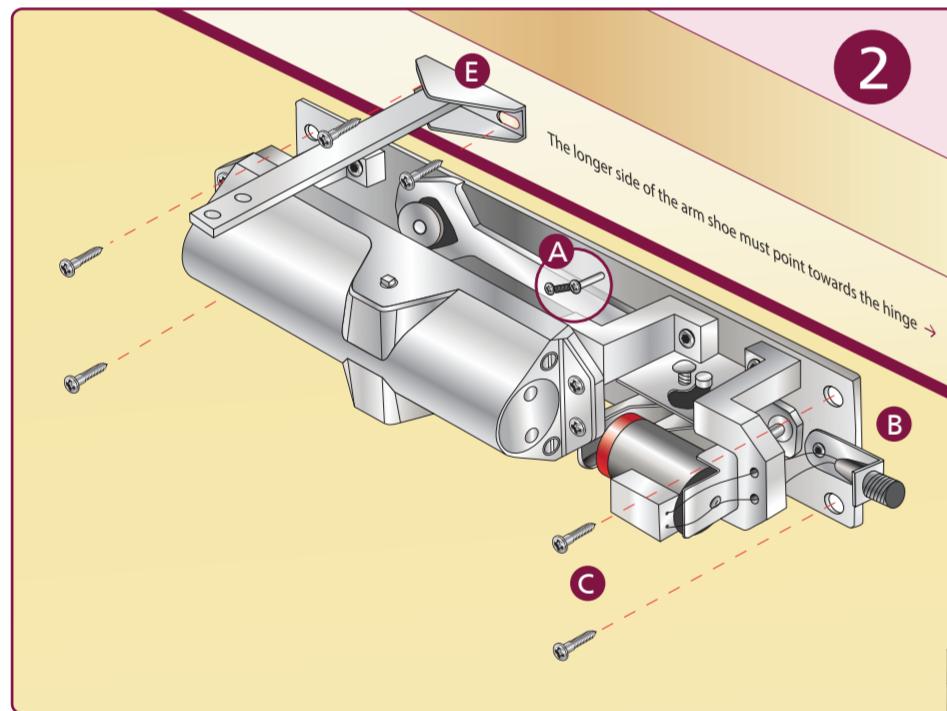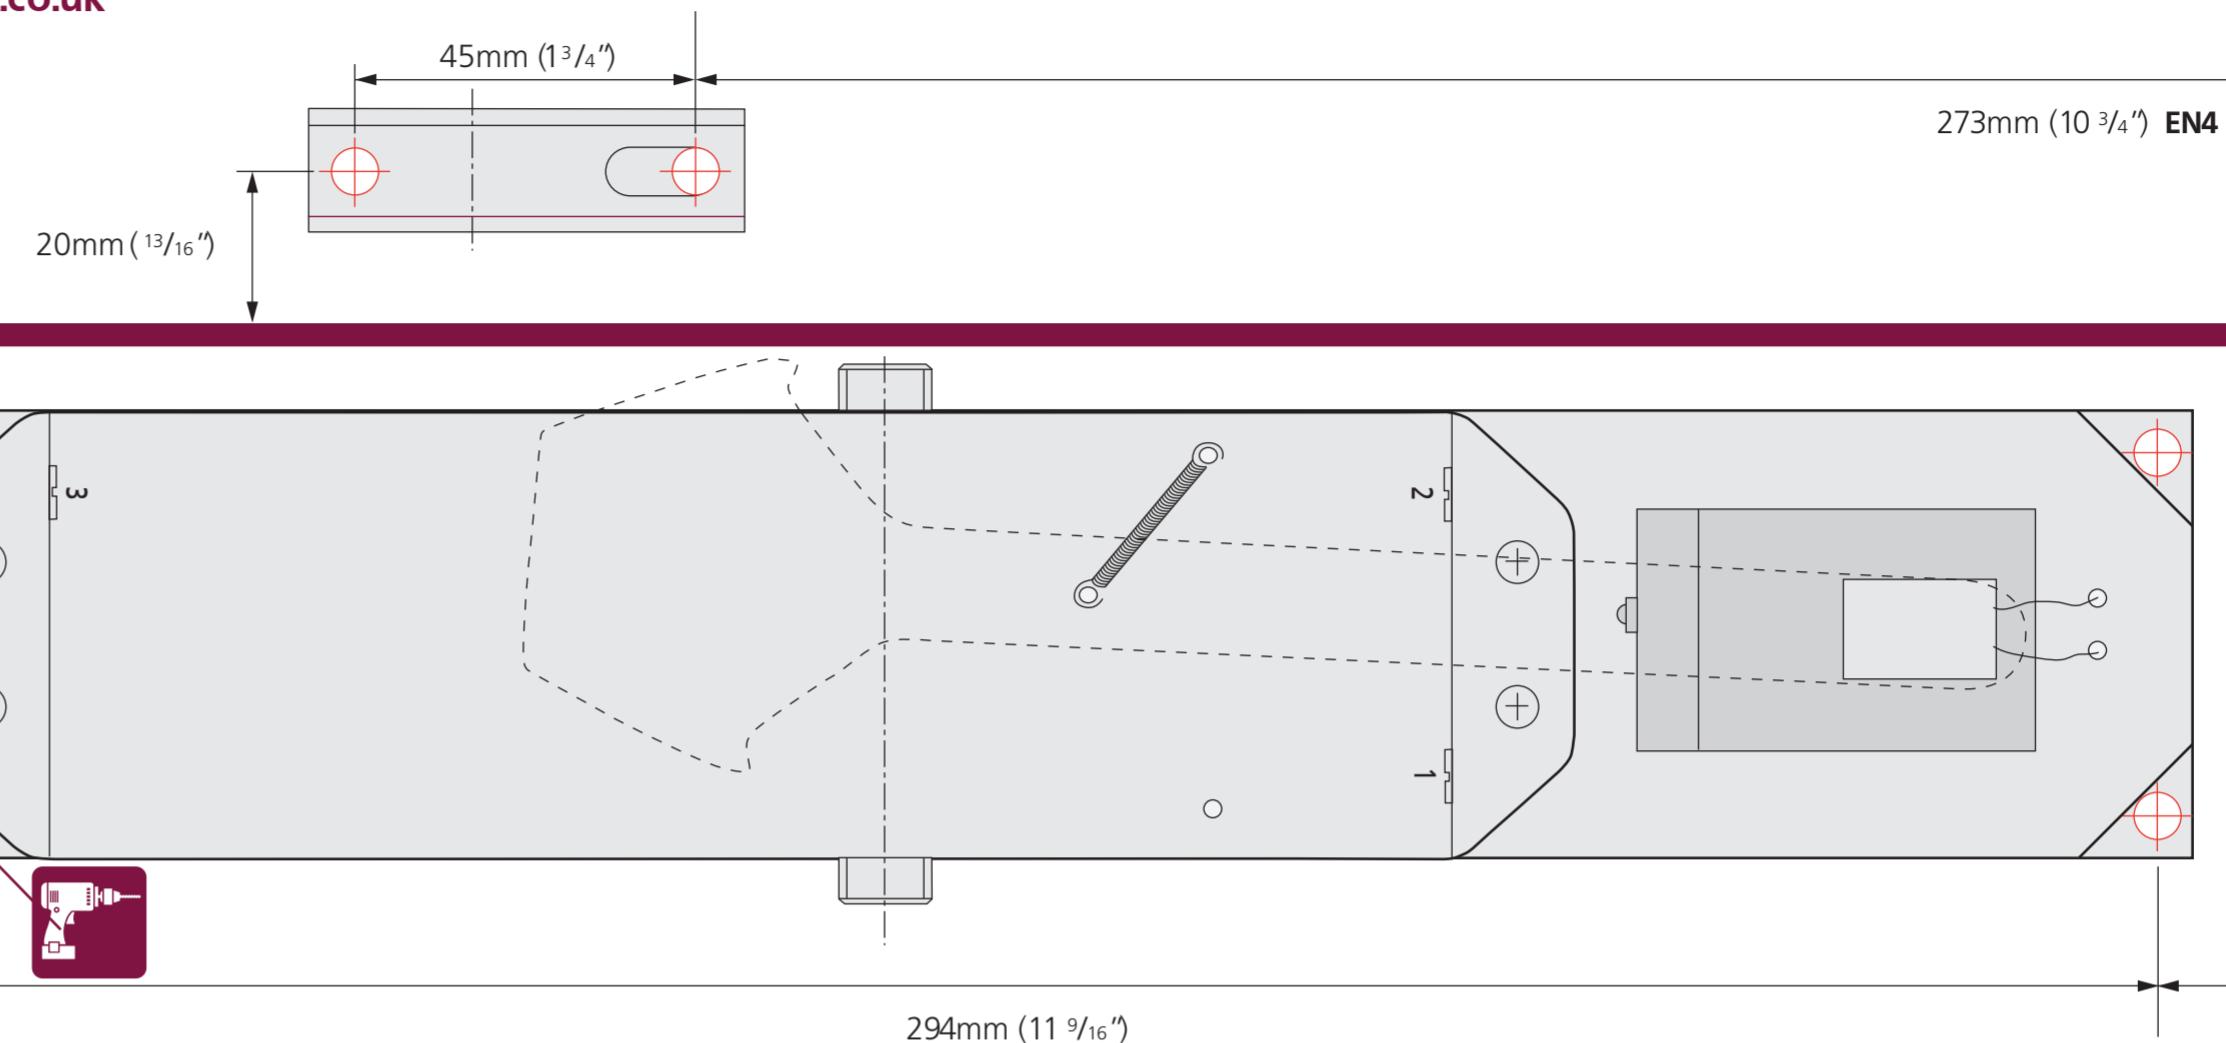

- A. Position spring to lift the Catch Plate to the top location pin.
B. Remove locking screw on electrical connection bracket to each end of the unit. Keep for later.
C. Fix closer to door with the Electromagnet nearest to the hinge.
D. Refit the locking screw on both electrical connections.
E. Separate the arm assembly and connect to the frame with the long end of the arm shoe towards the hinge.

CHOOSE EITHER "HOLD OPEN" OR "SWING FREE".


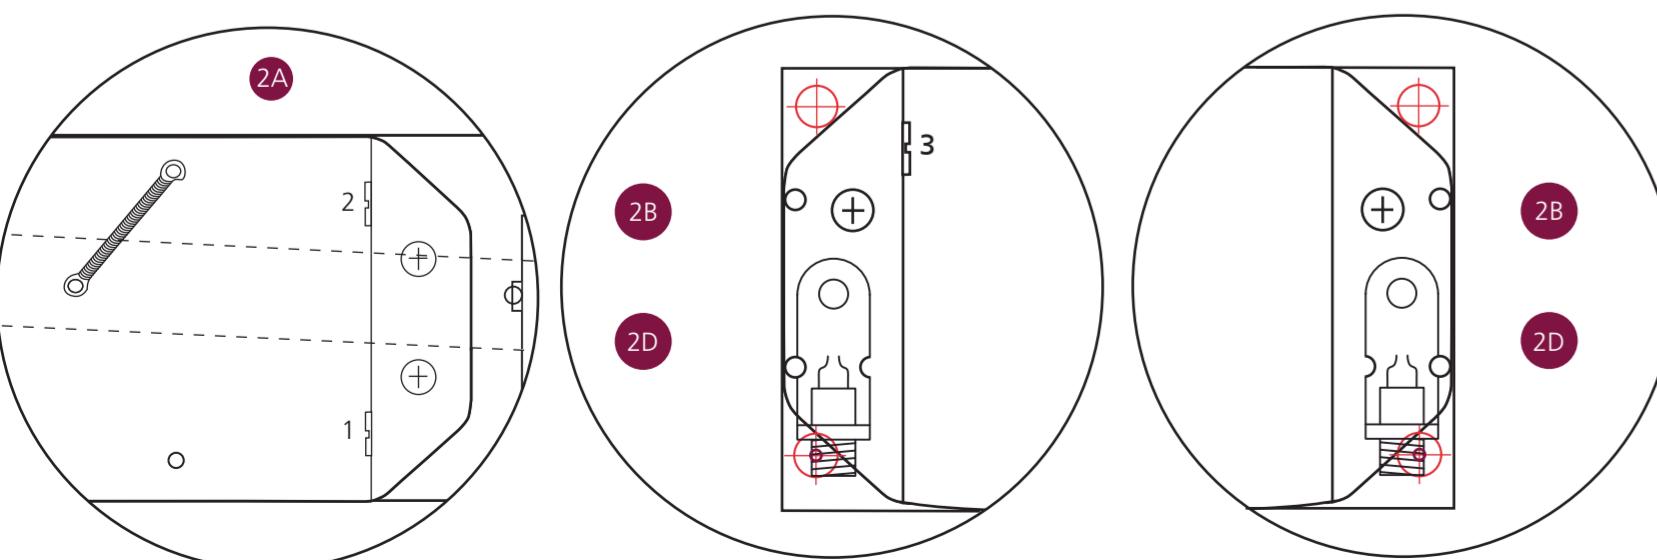


THE PINION BOLT MUST BE TIGHTENED TO 12NM

3
NB: Choose either
3A HOLD OPEN FIXING OR
3B SWING FREE FIXING


3A. HOLD OPEN

- A. Insert the 2 metal bearing collars into the nylon bearing collars.
B. Push the bearing collar into both arm holes insisting that the secondary part of the arm is on the top.
C. Insert the bolt up through the Arc Wheel and through the second hole in the forearm and lock with the captive nut.

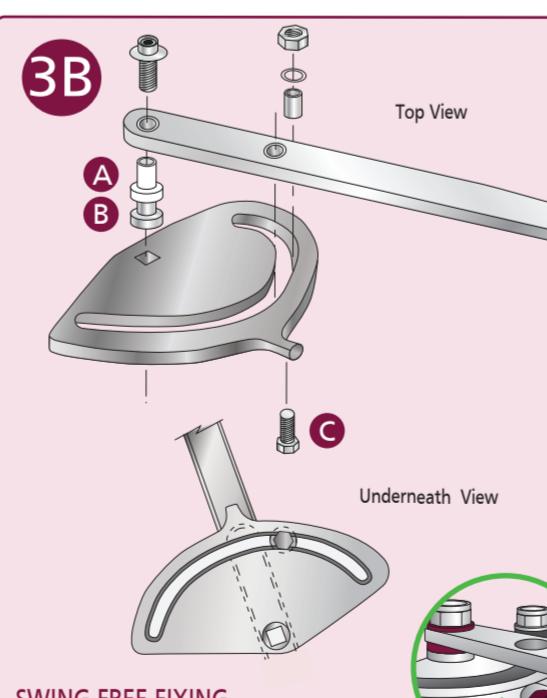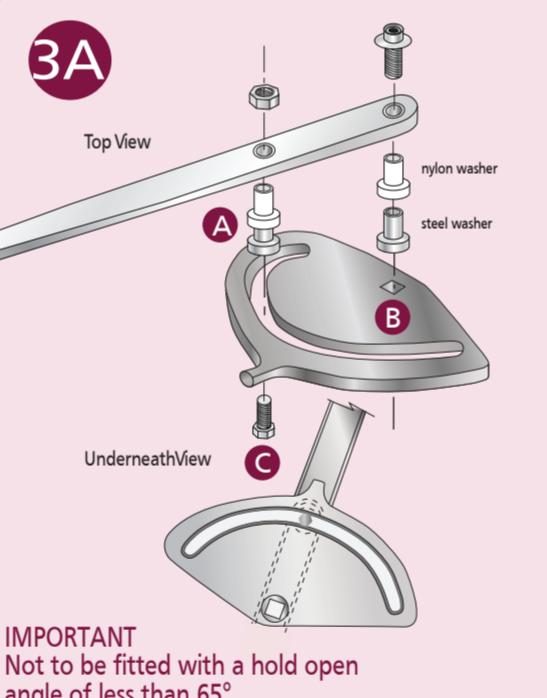

3B. SWING FREE

- A. Insert a metal bearing collar into the nylon bearing collar.
B. Push the bearing collar into the first forearm hole insisting that the secondary part of the arm is on the top.
C. Insert machine bolt up through the bottom of the Arc Wheel through the spacing collar and lock with washer and bolt next to the arm (NOT THROUGH THE ARM).

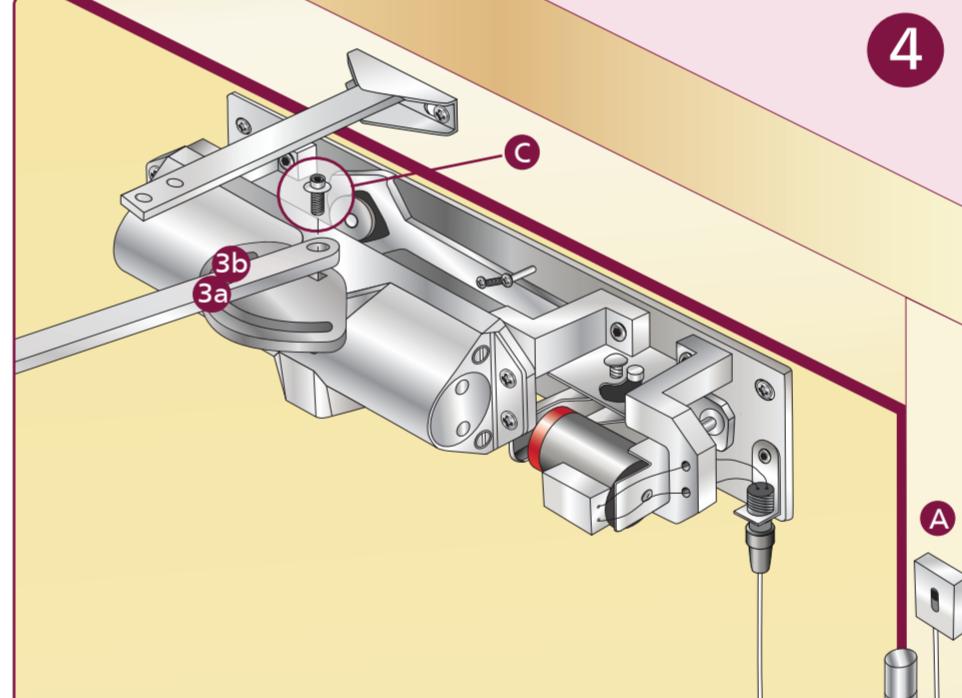

- A. Wire the electrical connections to the 24V supply on the door frame.
B. Plug in the lead and fasten. Switch on the electrical supply.
C. Position the Arm Assembly onto the Door Closer Body at approx. 90 degrees and fasten with the Long Shoulder bolt.

EN 4 Power Size

EN Size	Max door width	
4*	1100mm	130°

*FACTORY PRE-SET

IMPORTANT NOTES:
ALWAYS THAT ARE VISIBLE WHEN THE COVER IS ON SHOULD BE CHECKED AND TIGHTENED EVERY 3 MONTHS
IF REQUIRED.
ANY WORN OR DAMAGED PART MUST BE NOTIFIED TO THE SUPPLIER UPON OBSERVATION.
KEEPING A WRITTEN LOG OF THE INSPECTIONS IS ADEQUATE FOR YOUR GUARANTEE.

THE PINION BOLT MUST BE TIGHTENED TO 12NM.


VOLTAGE INPUT: 24V DC

POWER CONSUMPTION: 2.1 Wh

A. MECHANICAL DOOR CLOSER IS NOT DESIGNED TO OVERCOME POOR FITTING, EXCESSIVE AIR PRESSURES OR BINDING SMOKE AND WEATHER SEALS. EXCESSIVE AIR PRESSURES CAN BE CREATED BY THROUGH DRAFT, BY AIR CONDITIONING, BY SMALL ROOMS WITHOUT VENTILATION, OR WHERE NO AIR TRANSFERS GRILLS ARE FITTED. MECHANICAL DOOR CLOSERS ARE DESIGNED TO CLOSE THE STATED AND TESTED SPECIFICATION OF DOOR WEIGHT AND DOORSETS/DOOR ASSEMBLIES WHEN DOORS ARE FITTED WITH CORRECT GAPS AND NOT BINDING ON SEALS. IF YOU ENCOUNTER PROBLEMS WITH DOORS NOT CLOSING PLEASE WATCH OUR "6 WAYS TO TROUBLE-SHOOT A DOOR CLOSER" VIDEO ONLINE. WHERE DOORS ARE NOT CLOSING DUE TO AIR PRESSURES THEN PROFESSIONAL ADVICE FROM AN AUTHORISED INSTALLER IS RECOMMENDED TO FIT TESTED AND THIRD PARTY CERTIFIED AIR TRANSFER GRILLS AND/OR AUTOMATIC DOOR OPERATORS.
NOTE: BC VALVES ARE DESIGNED TO ASSIST BACK-CHECK AND DO NOT REPLACE THE REQUIREMENT FOR CORRECTLY FITTED DOORSTOPS OR SAFETY BARRIERS.

TECHNICAL INFORMATION:
BS EN1624-1:2014 + A1:2018

FURTHER WARRANTY INFORMATION: [https://www.rutlanduk.co.uk/rutland-warranty](http://www.rutlanduk.co.uk/rutland-warranty)

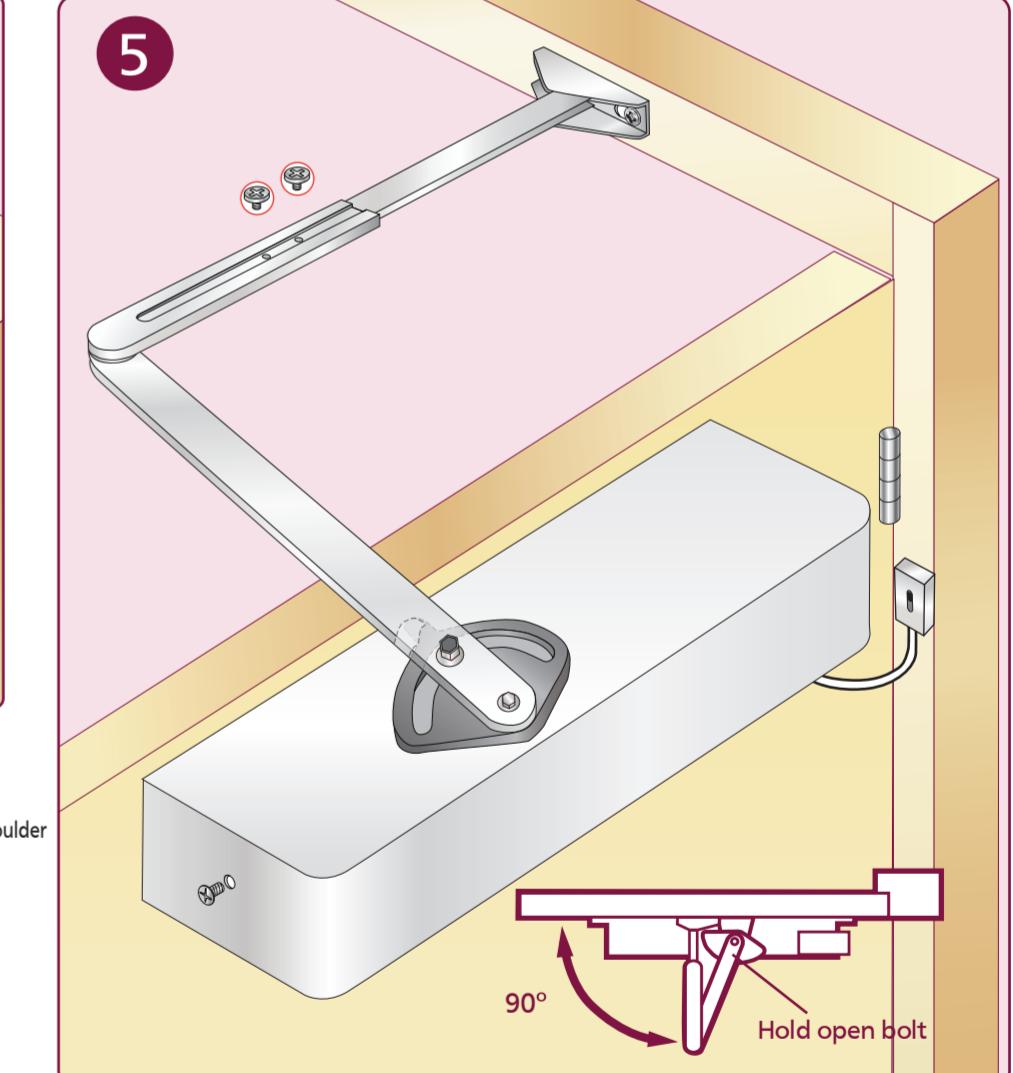

- A. Open door and rotate the arm through 180° to engage the hold open Catch Plate.
B. Fasten secondary arm together and secure with locking screw. Switch off electricity and allow door to close.
C. Adjust secondary arm so it holds @ 90° to the frame and tighten the two locking screws.

6. SET UP AND ADJUST

- A. Adjust Closing Speed valve "1". This works from fully open to 15°. Turn clockwise to slow down the closing speed.
B. Adjust Latching Speed valve "2". This works from 15° to closed. Turn clockwise to slow down the latching speed.
C. Switch on electricity and re-open the door to hold on the Catch Plate.

7. FINISHING

- A. To adjust the hold open or swing free angle on the Arc Wheel, first loosening the second nut and turn the door as required and retighten.